

OULEMEI

ШНЕКОВАЯ СОКОВЫЖИМАЛКА ДЛЯ ФРУКТОВ И ОВОЩЕЙ OLM-YZA010



Руководство пользователя

Внимательно прочитайте и полностью разберитесь в данном руководстве по эксплуатации перед использованием продукта. Оно содержит важную информацию для вашей безопасности, а также рекомендации по эксплуатации и обслуживанию.

Уважаемые пользователи, благодарим вас за выбор многофункциональной соковыжималки для фруктов и овощей OLM-YZA010 от OULEMEI. Для правильной эксплуатации изделия внимательно ознакомьтесь с данной инструкцией перед использованием. Особое внимание уделите **разделу о безопасности при использовании и мерах предосторожности**.

Примечание: Если изображение продукта незначительно отличается от фактического изделия, ориентируйтесь на реальный товар!

ВВЕДЕНИЕ

Благодарим вас за выбор многофункциональной соковыжималки для фруктов и овощей компании OULEMEI. Настоящее руководство разработано для обеспечения правильного использования и обслуживания изделия. Перед эксплуатацией внимательно изучите инструкцию и сохраните ее для дальнейшего использования.

Данное руководство применимо **только** к модели OLM-YZA010 компании OULEMEI. Компания оставляет за собой право окончательного толкования содержания. Все материалы в руководстве предназначены исключительно для ознакомления пользователей с принципами работы и обслуживания. По вопросам, не освещенным в инструкции, обращайтесь в службу поддержки компании. Мы будем рады вашим отзывам и надеемся, что продукция OULEMEI сделает вашу жизнь теплее, удобнее и здоровее.

Глава I. МЕРЫ ПРЕДОСТОРОЖНОСТИ И БЕЗОПАСНОЕ ИСПОЛЬЗОВАНИЕ

1. **Рабочее напряжение** изделия: 220–240 В, 50 Гц. Перед использованием убедитесь в соответствии параметров сети.
2. **Отключайте питание** перед разборкой, сборкой или регулировкой любых компонентов устройства.
3. Изделие относится к **классу защиты У**. При повреждении кабеля питания во избежание опасности обратитесь в службу поддержки или авторизованный сервисный центр. **Самостоятельный ремонт запрещен.**
4. Перед использованием проверьте целостность **кабеля питания, вилки, сетки для сока, шнека, корпуса соковыжималки** и других деталей. При обнаружении повреждений прекратите эксплуатацию и свяжитесь со службой поддержки.
5. При необходимости ремонта обращайтесь в сервисный центр. **Не разбирайте устройство самостоятельно.**
6. Перед включением убедитесь, что съемные компоненты (корпус соковыжималки, шнек, сетка для сока, крышка) установлены правильно.
7. **Во время работы запрещено:**
 - Вставлять руки или острые предметы в загрузочный отсек.
 - Использовать посторонние предметы вместо толкателя.
 - Закрывать загрузочное отверстие.

8. Подготовка продуктов:

- Нарезайте ингредиенты на кусочки, соответствующие размеру загрузочного отверстия.
- Удаляйте косточки, твердые семена, толстую кожуру или скорлупу.

9. При подаче продуктов прилагайте **умеренное усилие** для эффективного отжима.

10. После обработки некоторых фруктов/овощей возможны **естественные загрязнения** сетки, крышки или шнека. Это не влияет на безопасность продукции.

11. Режим работы:

- Автоматическое отключение после 15 минут непрерывной работы.
- Дайте двигателю остыть 30–40 минут перед повторным использованием.

12. При остановке из-за перегрузки:

- Нажмите кнопку **реверса** (🔄) для удаления застрявших продуктов.
- После кратковременного реверса возобновите работу в обычном режиме.

13. После использования:

- Дождитесь полной остановки двигателя и шнека.
- Отключите питание перед извлечением съемных частей.

14. Очистка:

- Не используйте воду с температурой выше **80°C** или микроволновую печь для дезинфекции деталей.
- Материалы контактных поверхностей соответствуют стандартам пищевой безопасности.

15. Запрещено:

- Погружать корпус устройства в воду или мыть под струей жидкости.
- Применять абразивные средства, стальную мочалку или агрессивные химикаты (бензин, ацетон).

16. Храните изделие в недоступном для детей месте. Не допускайте использование лицами с ограниченными возможностями, психическими отклонениями или без опыта (включая детей).

17. **Назначение:** только для бытового/ семейного применения.


18. Изделие относится к **классу защиты I** — обязательное заземление розетки.

Глава II.**КОМПЛЕКТУЮЩИЕ И ИХ ФУНКЦИИ**

№	Название детали	Функция
1	Корпус устройства	Основной блок с двигателем и электроникой
2	Сенсорная панель	Управление режимами работы
3	Чашка для сока	Сбор отжатого сока
4	Контейнер для жмыха	Сбор отходов после отжима
5	Толкатель	Подача и фиксация продуктов в зоне отжима
6	Корпус соковыжималки	Основной рабочий блок с загрузочным отверстием, соковыводящим и жмыхоотводящим каналами
7	Крышка корпуса	Регулируемый механизм для удобной загрузки. Совмещается с толкателем
8	Шнек	Основной элемент для измельчения и отжима
9	Сетка для сока (перфорированная вставка)	Фильтрация сока при совместной работе со шнеком
10	Силиконовое кольцо крышки	Герметизация стыка корпуса и крышки, регулировка плотности прилегания
11	Сборка крышки жмыхоотвода	Защитный механизм и регулятор вывода жмыха

Глава III. МЕТОДЫ ПРИМЕНЕНИЯ ПЕРЕД ПЕРВЫМ ИСПОЛЬЗОВАНИЕМ

Промойте все детали, контактирующие с продуктами (см. Главу IV).

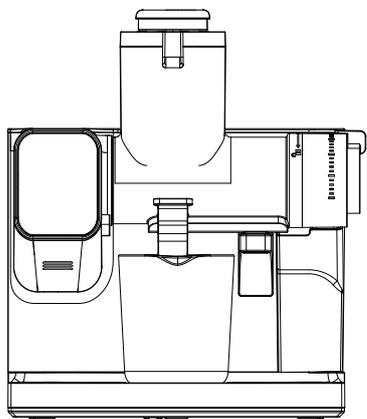

Управление сенсорной панелью:



- «»: Включение (зеленый индикатор) / Выключение (красный индикатор).
- «»: Реверс.
- «»: Старт/пауза.
- «**Мягкие фрукты**»: Для мягких фруктов/овощей.
- «**Твердые фрукты**»: Для плотных продуктов.
- «**Овощные/фруктовые соки**»: Для листовых овощей.
- «**Смешанные соки**»: Для комбинированных рецептов.


Порядок работы:

1. Нажмите «» для включения. Загорится зеленый индикатор, активируются все режимы.
2. Выберите нужный режим. Индикатор выбранного режима начнет мигать.
3. Нажмите «» для старта. Устройство работает на скорости, соответствующей выбранному режиму.
4. Повторное нажатие «» приостанавливает работу.
5. Реверс («»):
 - При активации двигатель работает в обратном направлении 10 секунд, затем останавливается.
 - Во время реверса мигают все индикаторы режимов.


ИСПОЛЬЗОВАНИЕ УСТРОЙСТВА

Приготовление сока


1. Установите шнек в корпус до упора.

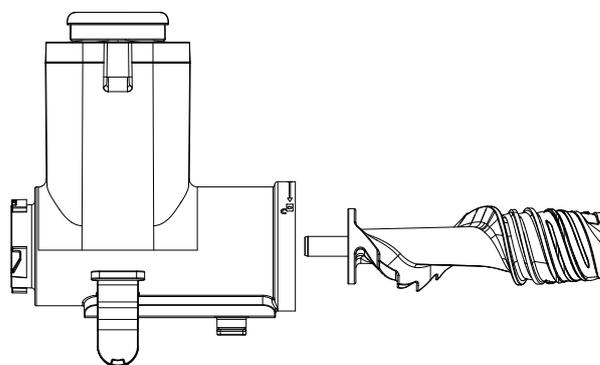


2. Наденьте сетку для сока на шнек, совместив фиксатор с пазом корпуса.

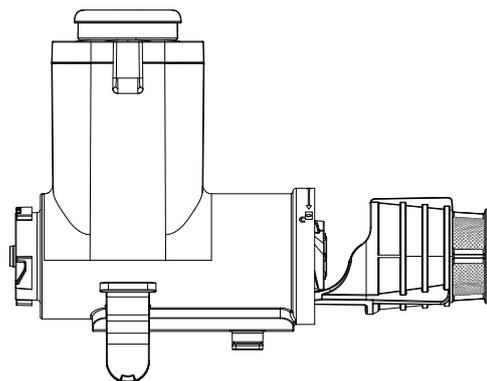


3. Совместите «△» на крышке жмыхоотвода с «□» на корпусе, закрепите поворотом по часовой стрелке до совпадения с «□».

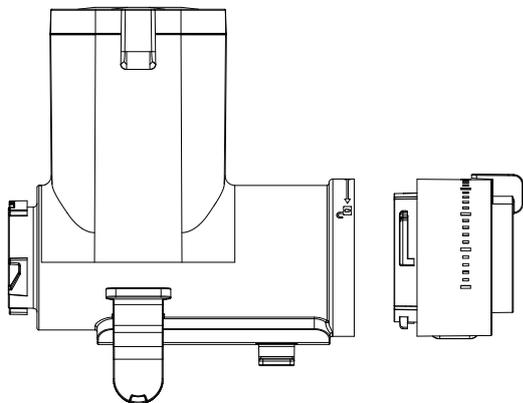


6. Установите контейнер для жмыха напротив жмыхоотвода.

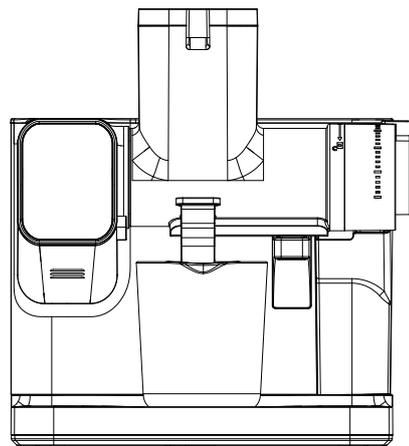


4. Закрепите корпус соковыжималки на основном блоке (совместите метки «△»).

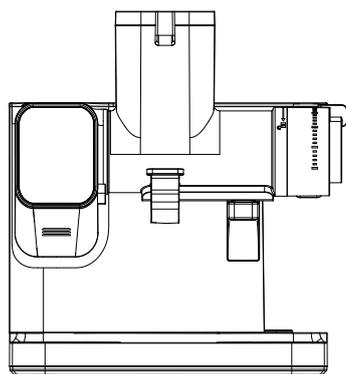

7. Включите питание (убедитесь, что переключатель выключен).

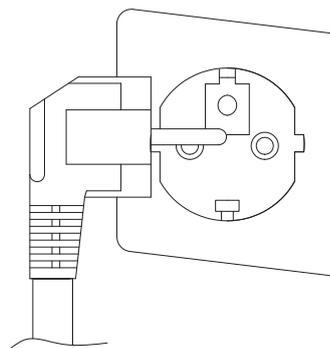


5. Поставьте чашку для сока под соковыводящий канал.

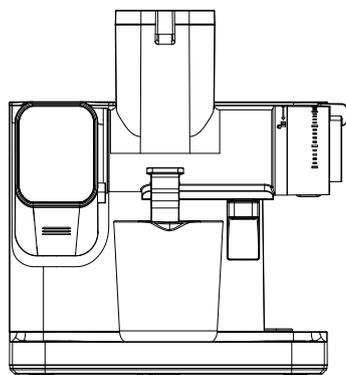


8. Подготовьте продукты:


- Вымойте и нарежьте кусочками подходящего размера.
- Удалите косточки, семена и жесткую кожуру.
- Не подходят: сахарный тростник, гуава, манго, имбирь и т.п.

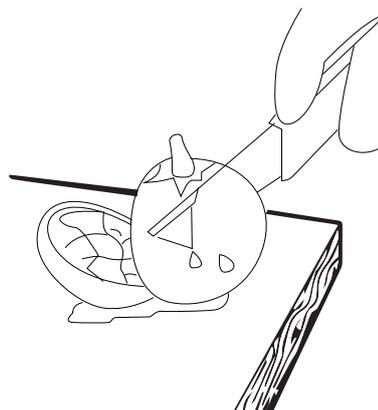


9. Проверьте, открыт ли соковыводящий канал.

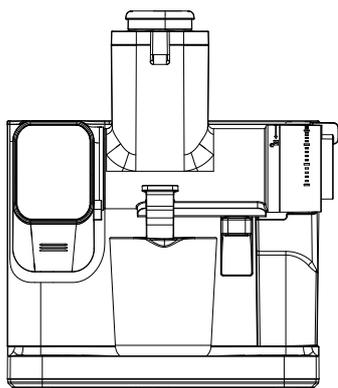

- Свежевыжатый сок рекомендуется употребить сразу.

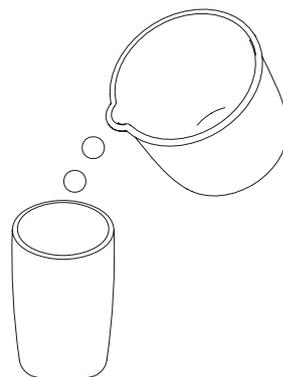


10. Включите устройство «», выберите режим. Время работы — до 15 минут.

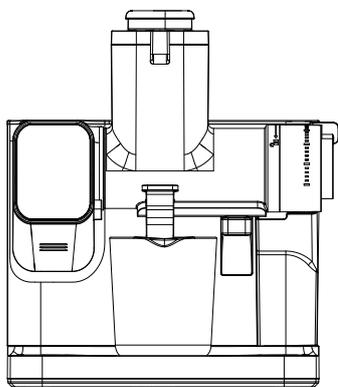

РЕКОМЕНДАЦИИ ПО ВЫБОРУ ФРУКТОВ/ОВОЩЕЙ

1. Лучшие варианты: ананас, сельдерей, яблоко, огурец, шпинат, дыня, томаты, апельсины, виноград.
2. Удаляйте толстую кожуру (например, у ананасов) и семена цитрусовых (дают горечь).
3. Яблочный сок темнеет быстро — добавьте несколько капель лимонного сока для сохранения цвета.

11. Подавайте продукты через загрузочное отверстие с помощью толкателя. Не прилагайте чрезмерных усилий.

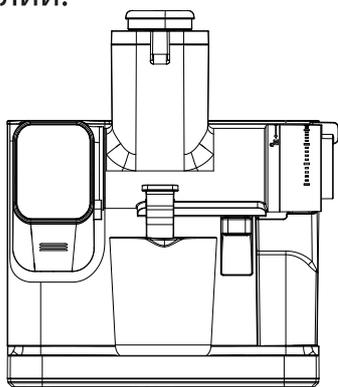

12. После завершения:

- Выключите устройство «».
- Дождитесь остановки шнека.
- Закройте соковыводящий канал, извлеките чашку.

Фрукты/овощи	Витамины/минеральные вещества	Энергетическая ценность
Яблоко	Витамин С	200 г = 150 кДж (72 ккал)
Абрикос	Богат пищевыми волокнами, содержит калий	30 г = 85 кДж (20 ккал)
Свекла	Хороший источник фолиевой кислоты, пищевых волокон, витамина С и калия	160 г = 190 кДж (45 ккал)
Черника	Витамин С	125 г = 295 кДж (70 ккал)
Брюссельская капуста	Витамины С, В, В6, Е, фолиевая кислота и пищевые волокна	100 г = 110 кДж (26 ккал)
Капуста	Витамин С, фолиевая кислота, калий, В6 и пищевые волокна	100 г = 110 кДж (26 ккал)
Морковь	Витамины А, С, В6 и пищевые волокна	120 г = 125 кДж (30 ккал)
Сельдерей	Витамин С и калий	80 г = 55 кДж (13 ккал)
Огурец	Витамин С	280 г = 120 кДж (29 ккал)
Фенхель	Витамин С и пищевые волокна	300 г = 145 кДж (35 ккал)


Фрукты/ овощи	Витамины/минеральные вещества	Энергетическая ценность
Виноград	Витамин С, В6 и калий	125 г = 355 кДж (85 ккал)
Киви	Витамин С и калий	100 г = 100 кДж (40 ккал)
Дыня	Витамин С, фолиевая кислота, пищевые волокна и витамин А	200 г = 210 кДж (50 ккал)
Нектарин	Витамин С, В3, калий и пищевые волокна	180 г = 355 кДж (85 ккал)
Персик	Витамин С, В3, калий и пищевые волокна	150 г = 205 кДж (49 ккал)
Груша	Пищевые волокна	150 г = 250 кДж (60 ккал)
Ананас	Витамин С	150 г = 245 кДж (59 ккал)
Малина	Витамин С, железо, калий и магний	125 г = 130 кДж (31 ккал)
Помидор	Витамин С, пищевые волокна, витамин Е, фолиевая кислота и витамин А	100 г = 90 кДж (22 ккал)

Глава IV. ОБСЛУЖИВАНИЕ И УХОД


- Перед очисткой отключите питание.
- Мойте устройство сразу после использования.
- Корпус нельзя мыть водой — используйте слегка влажную ткань.
- Храните изделие в сухом месте.

Разборка для очистки


1. Снимите толкатель, чашку для сока и контейнер для жмыха.

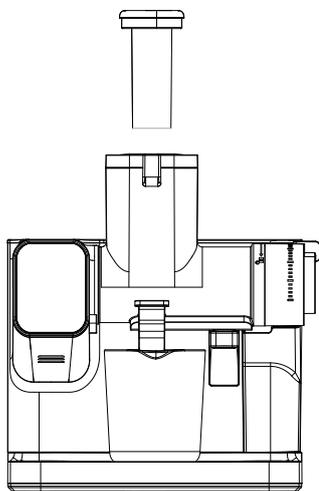

2. Нажмите кнопку на корпусе, поверните и извлеките блок соковыжималки.

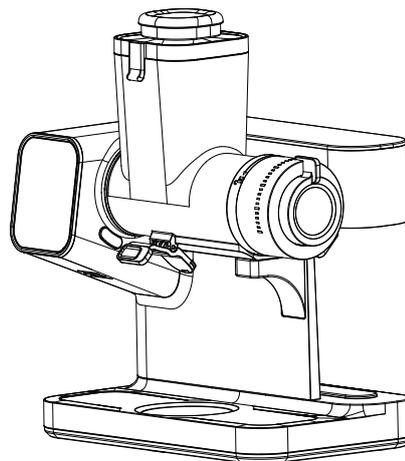

3. Снимите крышку жмыхоотвода, сетку и шнек. Мойте детали под проточной водой.

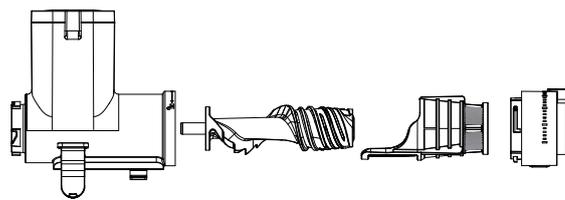

Глава V. ТЕХНИЧЕСКИЕ ПАРАМЕТРЫ

Напряжение	220–240 В
Мощность	300 Вт
Частота	50 Гц
Время непрерывной работы	≤15 минут
Интервал между циклами	≥30 минут

Глава VI. СООТВЕТСТВИЕ СТАНДАРТАМ

IEC60335-1:2004, IEC60335-2-14:2006

Производитель: Guangdong Oulemei Import & Export Co., Ltd.

Адрес: 301, No.2 Shafeng 3rd Road, Baiyun District, Guangzhou (Зоны C318, C320, C322)

Официальный сайт: www.oulemei.top

Глава VII.

АНАЛИЗ НЕИСПРАВНОСТЕЙ

Неисправность	Анализ причины	Метод устранения
Устройство не работает после включения	<ol style="list-style-type: none"> 1. Неправильное подключение вилки 2. Плохой контакт розетки 3. Обрыв кабеля или повреждение платы 	<ol style="list-style-type: none"> 1. Переподключите вилку 2. Попробуйте другую розетку 3. Обратитесь в сервисный центр
Появление неприятного запаха при первых использованиях	Нормальное явление	Если запах сохраняется после многократного использования — обратитесь в сервис
Самопроизвольное отключение	<ol style="list-style-type: none"> 1. Низкое напряжение 2. Слишком много или твердые продукты 3. Длительная работа 	<ol style="list-style-type: none"> 1. Проверьте напряжение 2. Удалите лишние продукты 3. Дайте двигателю остыть
Шум при работе	<ol style="list-style-type: none"> 1. Неправильная установка шнека/сетки 2. Повреждение двигателя 3. Особенности продуктов 	<ol style="list-style-type: none"> 1. Правильно установите компоненты 2. Обратитесь в сервис 3. Естественный звук трения
Затрудненное открытие крышки	<ol style="list-style-type: none"> 1. Загрязнение поверхности 2. Недоотжатые продукты 	<ol style="list-style-type: none"> 1. Очистите крышку 2. Дожмите продукты или используйте реверс

Примечание: Для других неисправностей обращайтесь в службу поддержки или авторизованный сервис. Самостоятельный ремонт запрещен.

Подготовил: _____

Проверил: _____

OULEMEI
**Multifunctionan Fruit
&
Vegetable Juicer**
OLM-YZA010



USER MANUAL

Read and understand this instruction manual thoroughly before using the product. It contains important information for your safety as well as operating and maintenance advice

Content

Introduction

Chapter I Precautions for Safe Use

Chapter II Parts and Functions

Chapter III Application Method

Chapter IV Repair and Maintenance

Chapter V Product Safety Indicators

Chapter VI Adoption Standard

Chapter VII Fault Analysis and Troubleshooting

Introduction

Dear Users,

Thank you for choosing the OULEMEI OLM-YZA010 multifunctional fruit and vegetable juicer. To ensure proper operation, please carefully read through this instruction manual before use. Pay close attention to the section on safety precautions and usage guidelines.


Note: If the product image differs slightly from the actual item, please refer to the physical product.

Chapter I Precautions for Safe Use

1. The input voltage of this product is **AC220-240V/50Hz**, please confirm it before using.
2. Please be sure that the power supply is disconnected before disassembling, assembling or calibrating any part of the product.
3. This product belongs to Y connection. In case the power cord is damaged, to prevent any danger, please contact the Customer Service Dept. of our company, or directly go to the repair point designated by our company. Do not undertake any disassembly or repair work on your own.
4. Before use, please check whether the power cord, plug, juice mesh, screw propeller, juicer body and other parts are damaged or not. In case of damage, please stop using this product and contact with the Customer Service Dept. of our company timely. Please do not disassemble and repair it by yourself so as to avoid danger.
5. If this product needs to be repaired in the process of use, please contact the Customer Service Dept. of our company, or directly go to the repair point designated by our company. Please do not disassemble it by yourself so as to prevent possible dangers.
6. Before power on, please be sure that the detachable parts such as the juicer body, screw propeller, juice mesh and juicer body cover are installed in place.
7. When the product is operating, it is forbidden to put your hands or sharp objects into the inlet to contact the rotating parts such as the screw propeller so as to avoid injury or product damage; it is strictly prohibited to use any object to replace the pushing rod or close your eyes to the inlet so as to prevent accidents.
8. The food material shall be cut into small pieces, and it is advisable to cut into the size that can be put into the inlet of the juicer body; fruits and vegetables with cores, hard seeds, thick peels or hard shells shall be removed before processing.
9. When adding the food ingredients, the force that pushes against the ingredients shall be appropriate to the extent that the ingredients can just be cut off.
10. After squeezing some fruits and vegetables, the juice mesh, juicer body cover, screw propeller and other accessories may be stained, which is a normal phenomenon, and the staining does not affect the food enjoyment and physical health.
11. The product is equipped with intelligent protection chip, and it will automatically stop after 15 minutes of continuous work. At this time, please stop using it for 30-40 minutes, and continue to use it after the motor is cooled down, as this method is conducive to prolong the life of the product.
12. If the motor stops automatically due to current-limiting protection or locked-rotor in the machinery equipment during operation, you may press the reverse icon (to expel the ingredients). Run in reverse for a few seconds, and then press the forward icon to resume normal operation of the machine. Should it continue to stall, it is advisable to clear the ingredients from the screw propeller before using it again. This approach serves to safeguard the motor and juicing accessories.

13. After use, please wait until the motor and screw propeller stop rotating and ensure that the power is disconnected before removing the detachable parts of the device.
14. The accessories of this product are not allowed to be disinfected with hot water over 80°C and microwave oven so as to avoid deformation and damage by heat. The material of the components that come into contact with food ingredients are all comply with the Food Hygiene Certification, which is clean, hygienic and reliable.
15. Please do not put the machine body into water or other liquids or rinse it under the water or other liquids so as to prevent it from damage.
16. Do not use steel wool, grinding detergent or corrosive liquids (such as gasoline or acetone) to clean the product.
17. The product shall be stored at places out of reach of children, and never let those who are limb deformed, mentally handicapped or lack relevant experience and knowledge (including children) to use or play this product.
18. This product is only applicable for individual or family use.
19. This product belongs to the electric appliance of Category I, and its socket ground cables must be well grounded.

Chapter II Parts and Functions

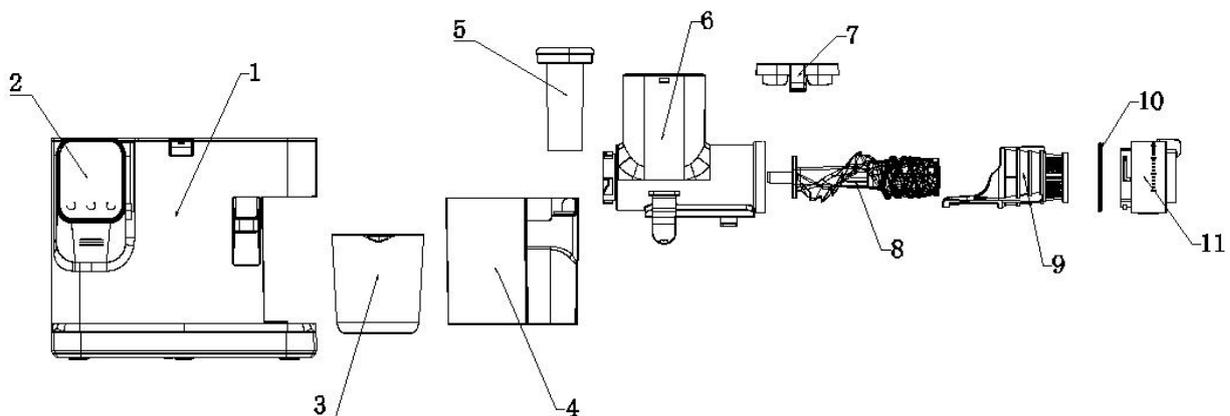



Serial No.	Name of Parts	Function Introduction
1	Machine Body	It is the main part of the machine, and there are motor and other parts in it, which the power source of the machine.
2	Touchscreen Switch	It is used to control the working status of the product.
3	Juice Cup	It is used to collect the juice separated by the juicer.
4	Fruit Residue Cup	It is used to collect the fruit residues separated by the juicer.
5	Pushing Rod	It is used to gently push and press the food materials at the time of adding food materials to make the ingredients in full contact with the screw propeller to improve the juicing efficiency.
6	Juicer Body	It is the main part for juicing. The food material enters from the inlet on the top of the juicer body, and the juice and fruit residues will be discharged through the juice outlet and residue outlet.
7	Juicer Body Lid	It is rotatable in an up-and-down manner, facilitating the addition of ingredients. It features a central hole that can be used together with the pushing rod to press the ingredients.
8	Screw Propeller	It is the main part for juicing, which is used to deliver food materials and grind food materials by grinding with juice mesh or squeezer.
9	Juice Mesh (Inner insert with hole mesh)	It runs in with the screw propeller, grinds the extracted ingredients and strains the juice out.
10	Juicing body cover silicone loop	It is placed at the joint between the juicing body and the juicing body cover (to prevent juice from flowing out from the joint) and also to adjust the tightness of the juicing body and the juicing body cover.

<p>11</p>	<p>Residue Outlet Cover Assembly</p>	<p>It is a key component in the juicing process. It connects to the juicer body and provides functions of safety protection and residue outlet regulation.</p>
-----------	--------------------------------------	--

Chapter III Application Method

· Please wash the parts that come into contact with the food ingredients thoroughly before the first use of this product. (Refer to “Chapter V Repair and Maintenance” for details)

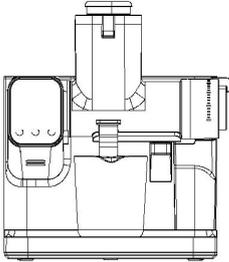	<p>Operation instructions of Touchscreen Switch</p> <p>·“” Key: Turn on - Green light on; Turn off - Red light on.</p> <p>·“” Key: Reverse start/stop key.</p> <p>·“” Key: Function start/stop key.</p> <p>·“Soft Fruit” Key: For soft fruits and vegetables</p> <p>·“Hard Fruit” Key: For harder fruits and vegetables</p> <p>·“Vegetable and Fruit Juice” Key: For leafy vegetable juice.</p> <p>·“Mixed Juice” Key: For making juice through mixing different fruits and vegetables.</p> <ol style="list-style-type: none"> 1. Press the “” key to turn on the machine. The “” key’s indicator light will turn green, all four menu function lights will illuminate, and the lights beneath the “” and “” keys will stay on constantly. 2. Select the desired menu function by pressing the corresponding menu function key. The “” key’s indicator light will turn green, the selected menu function light will flash, while the unselected menu function lights will remain constantly on. The menu options are Soft Fruit, Hard Fruit, Vegetable and Fruit Juice, and Mixed Juice, in order. 3. When the “” key is pressed once, the machine begins to operate at the corresponding speed based on the selected menu function. At this moment, the “” key indicator light turns green, the indicator lights for the “” and “” keys stay on constantly, the selected menu function light illuminates, and the other menu function lights turn off. 4. Pressing the “” key a second time will pause the operation. The “” key indicator light remains green, the indicator lights for the “” and “” keys stay on constantly, and the corresponding menu function light flashes, waiting for further key operations. Repeatedly pressing the “” key will switch between running and pausing.
--	--


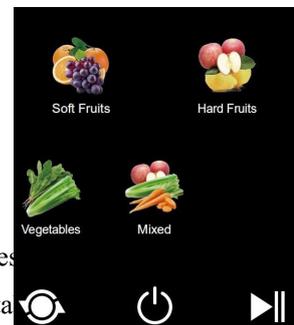









	<p>5. While the machine is powered on, pressing the “⏪” key will cause the motor to run in full-speed reverse. At this time, the “⏻” key indicator light turns green, the “⏪” and “▶” key indicator lights stay constantly on, and all menu indicator lights flash. The machine will automatically stop after reversing for 10 seconds. At this point, the “⏻” key indicator light turns green, the “⏪” and “▶” key indicator lights stay constantly on, and all menu indicator lights remain constantly on. The machine's operation is complete.</p> <p>6. During any menu function operation, pressing the “⏪” key will cause the machine to run in full-speed reverse. At this time, the “⏻” key indicator light turns green, the “⏪” and “▶” key indicator lights stay constantly on, the corresponding menu function light stays on, and all other menu indicator lights turn off. The machine will automatically stop after reversing for 10 seconds. At this point, the “⏻” key indicator light turns green, the “⏪” and “▶” key indicator lights stay constantly on, and the corresponding menu function light flashes, waiting for the “▶” key to be pressed to continue operation. If there is no key operation within 5 seconds, the machine's operation will end.</p>
--	---




I. Use of the Product

Please install and use the product by following the steps listed below:

1. Juicing

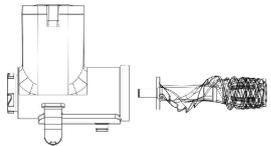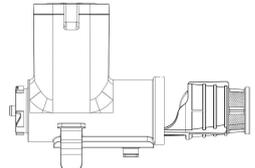	<p>1</p>	<p>Push the splined shaft of the screw propeller straight into the hole on the machine body until it reaches the bottom. (When it is not aligned, slightly rotate the screw propeller can be easily aligned)</p>
	<p>2</p>	<p>Insert the big hole end of the juice mesh from the rear of the screw propeller, and the positioning bar of the juice mesh shall be pushed into by aligning it with the slot in the juicer body.</p>

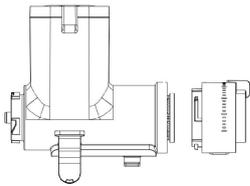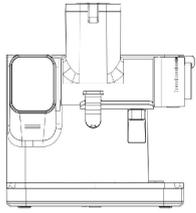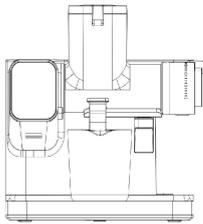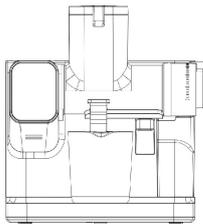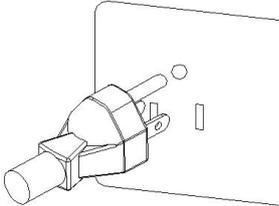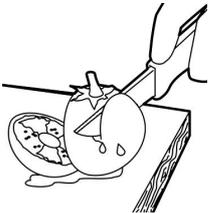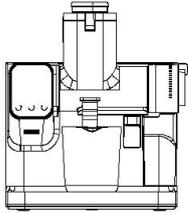	<p>3</p>	<p>Align the “△” on the residue outlet cover assembly with the “🔒” on the juicer body and push it in. Then, rotate it clockwise to firmly attach the residue outlet cover to the juicer body. The installation is complete when the “△” on the residue outlet cover assembly aligns with the “🔒” on the juicer body.</p>
	<p>4</p>	<p>Connect the juicer body to the machine body: Align the “△” on the juicer body with the “△” on the machine body and push it in. Then, rotate it clockwise to firmly attach the juicer body to the machine body. The installation is complete when the “○” on the juicer body aligns with the “△” on the machine body.</p>
	<p>5</p>	<p>Place the juice cup on the machine body, positioning its opening directly below the juice outlet of the juicer body.</p>
	<p>6</p>	<p>Insert the residue bin into the machine body, aligning its residue inlet with the residue outlet of the residue outlet cover assembly.</p>
	<p>7</p>	<p>Power on and get ready to work. (Please make sure the switch is off before switching on the power)</p>
	<p>8</p>	<p>Wash the fruits and vegetables clean, cut them into the size that can be put into the inlet. . Fruits and vegetables with cores, hard seeds, thick peels or hard shells shall be removed before processing. Note: Sugarcane, guava, mango, passion fruit, ginger and other fruits cannot be juiced with this machine.</p>
	<p>9</p>	<p>Check whether the outlet of the juicer body is in open state or not</p>

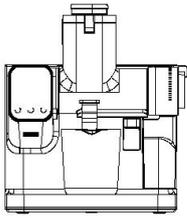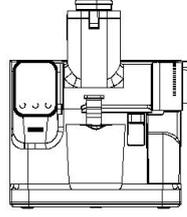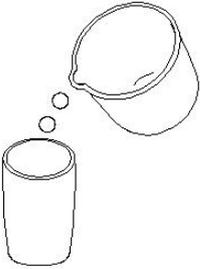	10	<p>Press the “” key to turn on the machine. The “” key’s indicator light will turn green, all four menu function lights will illuminate, and the lights beneath the “” and “” keys will stay on constantly.</p> <p>Select the desired menu function by pressing the corresponding menu function key. The “” key’s indicator light will turn green, the selected menu function light will flash, while the unselected menu function lights will remain constantly on. The menu options are Soft Fruit, Hard Fruit, Vegetable and Fruit Juice, and Mixed Juice, in order. The product starts working, with the working time being ≤15 minutes.</p> <p>. It is not allowed to touch the “ON/OFF” key with wet hands so as to avoid electric shock, electric leakage and fire hazard.</p>
	11	<p>Put the food ingredients into the inlet of the juicer body and push them in by using the pushing rod.</p> <p>. Please do not use too much force when pushing the ingredients. The force shall be appropriate to the extent that the ingredients can just be cut off.</p> <p>(It is prohibited to put fingers or other objects into the inlet of the juicer body! If the juice residue cup or the juice cup is full, the machine shall be stopped, and clean up before using.)</p>
	12	<p>When the processing of food ingredients is finished and the juice is no longer flowing out of the juicing nozzle of the juicer body, then press the “ON/OFF” key to disconnect the power supply. Please wait until the screw propeller has stopped rotating completely, screw the screw cap of the juice outlet (the screw cap will shut the juice outlet down), and then take the juice cup away from the juice outlet. (Freshly squeezed juice shall be drunk right away, as its taste and nutritional value can be influenced if it is exposed to the air for a period of time.)</p> <p>. The residue cannot be stored for a long time.</p> <p>. It is not allowed to touch the “ON/OFF” key with wet hands so as to avoid electric shock, electric leakage and fire hazard.</p>

II. Tips on Fruit Selection

1. Fresh fruits and vegetables shall be chosen, as they contain more juice. The fruits and vegetables that are especially suitable for juicing are: pineapple, celery stick, apple, cucumber, spinach, melons, tomatoes, oranges, grapes, etc.
2. Instead of peeling thin skins, peel thick skins from fruits and vegetables such as oranges and pineapples. The




seeds of citrus fruits shall be removed, as they give the juice a bitter taste.

3. When making apple juice, the concentration of apple juice depends on the type of apple selected; the juicier the apple, the cleaner the juice will be, so please choose the type of apple for juicing according to the concentration of juice you want.
4. The freshly squeezed apple juice will turn brown very quickly, and you may add a few drops of lemon juice to slow the browning process.
5. Leaves and stalks (such as lettuce) can be juiced with this machine.
6. The nutrients of common fruits and vegetables are as follows:

Fruits/vegetables	Vitamins/mineral substances	KJ/Calorie
Apple	Vitamin C	200g= 150KJ (72 Calorie)
Apricot	Abundant in dietary fiber, containing kalium	30g= 85KJ (20Calorie)
Beet	Good sources of folic acid, dietary fiber, vitamin C and kalium	160g= 190KJ (45 Calorie)
Blueberry	Vitamin C	125g= 295KJ (70 Calorie)
Brussels sprouts	Vitamin C, B, B6, E, folic acid and dietary fiber	100g= 110KJ (26 Calorie)
Cabbage	Vitamin C, folic acid, kalium, B6 and dietary fiber	100g= 110KJ (26 Calorie)
Carrot	Vitamin A, C, B6 and dietary fiber	120g= 125KJ (30Calorie)
Celery	Vitamin C and kalium	80g= 55KJ (13Calorie)
Cucumber	Vitamin C	280g= 120KJ (29Calorie)
Foeniculum vulgare	Vitamin C and dietary fiber	300g= 145KJ (35 Calorie)
Grape	Vitamin C, B6 and kalium	125g= 355KJ (85 Calorie)
Kiwi fruit	Vitamin C and kalium	100g= 100KJ (40 Calorie)
Melon	Vitamin C, folic acid, dietary fiber and vitamin A	200g= 210KJ (50 Calorie)
Nectarine	Vitamin C, B3, kalium and dietary fiber	180g= 355KJ (85 Calorie)
Peach	Vitamin C, B3, kalium and dietary fiber	150g= 205KJ (49Calorie)
Peer	Dietary fiber	150g= 250KJ (60Calorie)
Pineapple	Vitamin C	150g= 245KJ (59 Calorie)
Raspberry	Vitamin C, ferrum, kalium and magnesium	125g= 130KJ (31Calorie)
Tomato	Vitamin C, dietary fiber, vitamin E, folic acid and vitamin A	100g= 90KJ (22 Calorie)

Chapter IV Repair and Maintenance

1. Before cleaning the product, please make sure to turn off the switch and cut off the power supply.
2. Please clean the product timely after using.
3. The machine body cannot be washed with water. The stains must be wiped dry with a rag or cotton cloth that has been wrung out.
4. Make sure the product is clean and dry before storing it.
5. Please refer to the following steps to disassemble the machine before cleaning:

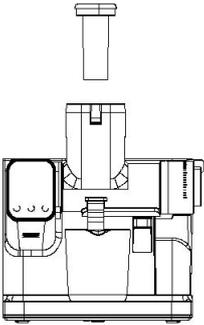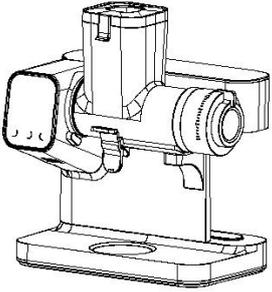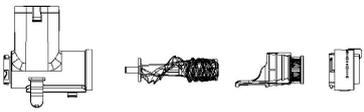	<p>1</p>	<p>Take the pusher, the juice cup and residue bin down first.</p>
	<p>2</p>	<p>Press the key beside the juicer body, then rotate the juicer body clockwise or counterclockwise to remove it. The juicer body cannot be removed if this button is not pressed.</p>
	<p>3</p>	<p>After removing the juicer body, sequentially detach the residue outlet cover assembly, juice mesh, and screw propeller. The detachable parts can be washed clean with clear water.</p>

Chapter V Product Safety Indicators

Rated Voltage	220-240V~
Rated Power	300W
Rated Frequency	50Hz
Continuous Working Hours	Less than or equal to 15 minutes
Time Interval	Great than or equal to 30 minutes

Chapter VI Adoption Standard

IEC60335-1: 2004 IEC60335-2-14: 2006

Chapter VII Fault Analysis and Troubleshooting

Fault Phenomenon	Reason Analysis	Troubleshooting
The product fails to work after being electrified and the switch is turned on	<ol style="list-style-type: none"> 1. The power plug is not properly plugged in 2. The power socket is in poor contact 3. The internal cables of the machine are disconnected or the circuit board is damaged 	<ol style="list-style-type: none"> 1. Plug the power plug again 2. Change a power socket and try again 3. Please send it to the nearest after-sales service point for inspection.
The motor emits an unpleasant smell at the first few times when the product is used	This is not an abnormal phenomenon	If the product still emits the odor after repeated use, please send it to the nearest after-sales service point for inspection.
Shutdown during using	<ol style="list-style-type: none"> 1. Low voltage 2. The food ingredients are too much or too hard 3. The machine has been in service for too long 	<ol style="list-style-type: none"> 1. Check whether the voltage is too low 2. Disconnect the power supply and remove the excess ingredients (sugarcane cannot be juiced, and the fruits and vegetables' hard skin/core shall be removed first before juicing) 3. It is a normal phenomenon, and the motor will resume working after a period of time
There is noise while operating	<ol style="list-style-type: none"> 1. The screw propeller and juice mesh are not installed in place, resulting in the unstable operation when operating. 2. The starting motor in the machine 	<ol style="list-style-type: none"> 1. Install the screw propeller and juice mesh in place. 2. Please send it to the nearest after-sales service point for inspection.

	body is damaged. 3. The squeezing of some ingredients can be noisy.	3. The food itself has the friction sound, and it belongs to a normal phenomenon.
It is difficult to unscrew the juicer body cover after juicing	1. There are oil stains on the surface of the juicer body cover; 2. There are ingredients on the juice mesh that are not completely juiced;	1. Clean the surface of the juicer body cover; 2. Continue to juice the ingredients on the juice mesh or press the reverse key to operate for a few seconds to expel the ingredients from the juice mesh.

Notes:

- The above are the common fault analysis and troubleshooting methods. As for other faults, please contact the Customer Service Dept. of our company or directly go to the Repair Point designated by our company for repairing. It is prohibited to disassemble and repair the machine by yourself.
- Please refer to the Product Guarantee Card for the details of the repair points designated by our company.

Prepared By: _____

Examined and Approved By: _____

Guangdong Oulemei Import and Export Co., Ltd

301, No. 2 Shafengsan Road, Baiyun District, Guangzhou (location:C318 C320 C322area)
www.oulemei.top.