


OULEMEI

МИНИ УТЮГ С ПАРОГЕНЕРАТОРОМ И LCD-ДИСПЛЕЕМ

OLM-YDX011

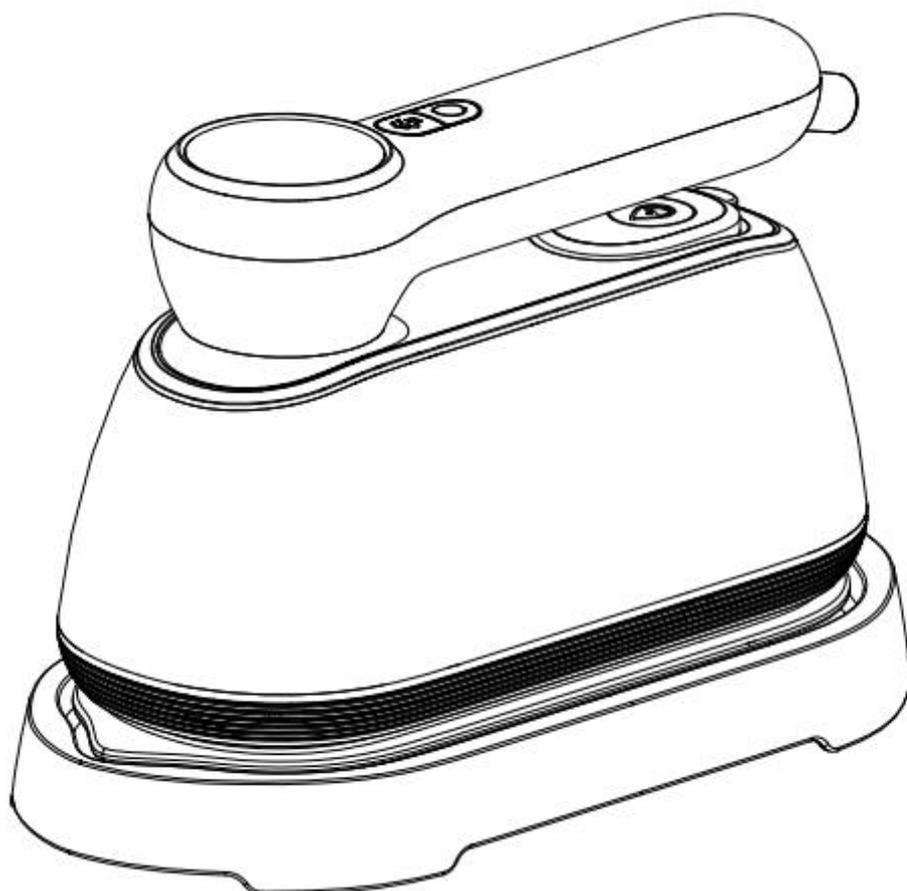

Руководство пользователя

Внимательно прочитайте и полностью разберитесь в данном руководстве по эксплуатации перед использованием продукта. Оно содержит важную информацию для вашей безопасности, а также рекомендации по эксплуатации и обслуживанию.

ВАЖНЫЕ МЕРЫ БЕЗОПАСНОСТИ

При использовании утюга всегда соблюдайте основные меры предосторожности.

ПРОЧИТИТЕ ВСЕ ПУНКТЫ ПЕРЕД ИСПОЛЬЗОВАНИЕМ

1. Используйте утюг только по назначению.
2. Во избежание риска поражения электрическим током не погружайте утюг в воду или другие жидкости.
3. Не допускайте контакта шнура с горячими поверхностями. Дайте утюгу полностью остыть перед хранением. Свободно намотайте шнур вокруг утюга при хранении.
4. Всегда отключайте утюг от электросети при заполнении водой, её сливе или когда устройство не используется.
5. Не используйте утюг с повреждённым шнуром или если утюг был повреждён при падении. Во избежание риска поражения электрическим током не разбирайте утюг самостоятельно — обратитесь в авторизованный сервисный центр для диагностики и ремонта. Неправильная сборка может привести к поражению током при дальнейшем использовании.
6. При использовании утюга детьми или в их присутствии требуется особый контроль. Не оставляйте утюг без присмотра при подключении к сети или на гладильной доске.


7. Ожоги могут возникнуть от прикосновения к горячим металлическим частям, воде или пару. Будьте осторожны при переворачивании утюга — в резервуаре может оставаться горячая вода.

ДОПОЛНИТЕЛЬНЫЕ УКАЗАНИЯ

1. Во избежание перегрузки цепи не включайте другие мощные приборы в ту же розетку.
2. Если необходимо использовать удлинитель, применяйте шнур с токовым номиналом не менее 10 А. Менее мощные шнуры могут перегреваться. Располагайте шнур так, чтобы его нельзя было задеть или зацепить.

ОПИСАНИЕ УСТРОЙСТВА И ЕГО ЭКСПЛУАТАЦИЯ

- (A) Кнопка
- (B) LCD-экран
- (C) Корпус
- (D) Крышка заливного отверстия
- (E) Подставка
- (F) Переключатель пара

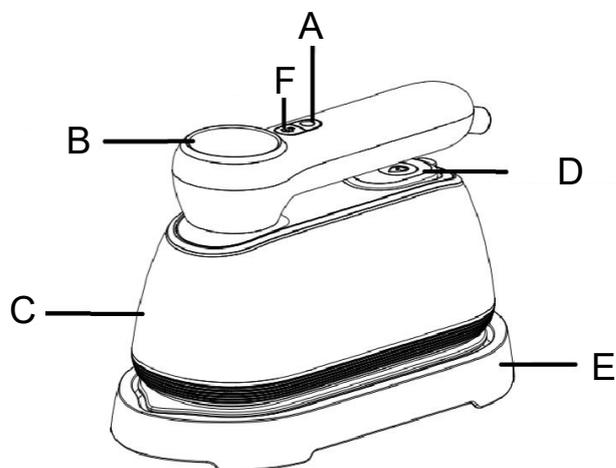

ЗАПРАВКА ВОДОЙ

1. Отключите утюг от сети и залейте воду через заливное отверстие.
2. Закройте крышку после заполнения.

Примечание:

Используйте только чистую водопроводную воду и не превышайте отметку максимального уровня.

СУХАЯ ГЛАЖКА

1. Разместите одежду на ровной и чистой гладильной поверхности;
2. Подключите устройство к сети для предварительного нагрева — в этот момент ЖК-экран активируется с отсчётом времени; по завершении прогрева загорится значок сухой глажки (☰), на экране отобразится «0», после чего можно начинать использование;
3. В связи с невозможностью регулировки температуры не гладьте напрямую ткани с низкой термостойкостью. Настоятельно рекомендуется накрывать такие ткани влажным полотенцем;
4. Устройство допускает поворот на 90° в обе стороны для глажки под разными углами.

ПАРОВАЯ ГЛАЖКА

1. После завершения прогрева и фиксации значка сухой глажки активируйте функцию пара. Нажмите кнопку (○) для выбора одного из трёх режимов подачи пара;

2. Однократно нажмите кнопку переключателя пара (☁) для активации функции. При появлении непрерывного звука «Так-Так» повторно заполните резервуар водой.

Примечание:

- При первом использовании возможно выделение нескольких капель воды — это нормально. После прогрева явление исчезнет.
- Никогда не направляйте утюг на людей или животных во избежание ожогов.

ЧИСТКА И УХОД

- Протирайте корпус и подставку мягкой тканью.
- При сильных загрязнениях не мойте утюг водой — используйте мягкую ткань с нейтральным моющим средством.
- Налёт на подошве удаляйте влажной тканью или неабразивным чистящим средством.
- Не используйте металлические щётки или скребки. Пластиковые детали протирайте влажной тканью.
- После полного остывания отключите утюг от сети и слейте воду.
- Храните утюг на подставке.
- Из-за высокой минерализации воды в некоторых регионах возможно образование осадка, что приводит к прерывистой подаче пара или её прекращению.

Способы удаления минеральных отложений:

1. Смешайте 50% уксуса и 50% воды.
2. Включите утюг, нажмите кнопку пара для попадания смеси в нагревательную камеру. Отключите питание и оставьте на 40 минут.
3. Слейте смесь и заполните резервуар чистой водой.
4. Повторите процедуру несколько раз до исчезновения запаха уксуса.

Примечание: Если после очистки утюг не работает нормально, обратитесь в сервисный центр.

УСТРАНЕНИЕ НЕИСПРАВНОСТЕЙ

В таблице приведены распространённые проблемы. Если решение не найдено, обратитесь в авторизованный сервисный центр.

Проблема	Возможная причина	Решение
Не включается	<ul style="list-style-type: none"> • Нет питания • Неисправна плата 	<ul style="list-style-type: none"> • Проверьте питание • Ремонт в сервисе
Нет нагрева (экран горит)	<ul style="list-style-type: none"> • Перегорел предохранитель • Неисправен термостат • Проблема с платой 	<ul style="list-style-type: none"> • Залейте воду • Ремонт в сервисе
Подшва греется, экран не работает	Неисправен экран	Ремонт в сервисе
Слабый пар	Низкое напряжение	Измените время использования
Протекает резервуар	Трещина в резервуаре	Ремонт в сервисе
Утюг пропускает воду	Повреждён внутренний шланг	Ремонт в сервисе
Деформация резервуара	Залита горячая вода	Ремонт в сервисе
Экран горит, кнопки не работают	Неисправна плата	Ремонт в сервисе

Производитель: Guangdong Oulemei Import and Export Co., Ltd.

Адрес: комната 301, № 2, 3-я улица Шафэн, район Байюнь, Гуанчжоу (зоны С318, С320, С322 в зале С)

Официальный сайт торгового центра: www.oulemei.top.

OULEMEI

MINI LCD STEAM IRON

OLM-YDX011



USER MANUAL

Read and understand this instruction manual thoroughly before using the product. It contains important information for your safety as well as operating and maintenance advice

IMPORTANT SAFETY INSTRUCTIONS

When using your flatiron, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

1. Use iron only for its intended use.
2. To protect against a risk of electric shock, do not immerse the iron in water or other liquids.
3. Do not allow cord to touch hot surfaces. Let iron cool completely before putting away. Loop cord loosely around iron when storing.
4. Always disconnect iron from electrical outlet when filling with water or emptying and when not in use.
5. Do not operate iron with a damaged cord or if the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron take it to a qualified serviceman for examination and repair. Incorrect reassembly can cause a risk of electric shock when the iron is used.
6. Close supervision is necessary for any appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
7. Burns can occur from touching hot metal parts, hot water, or steam. Use caution when you turn a steam iron upside down – there may be hot water in the reservoir.

SPECIAL INSTRUCTIONS

1. To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
2. If an extension cord is absolutely necessary, a 10-ampere cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.

DESCRIPTION OF DEVICE

(A). **Button**


(B). **LCD screen**

(C). **Body**

(D). **Water Filling Cap**

(E). **Base**

(F). **Steam switch**

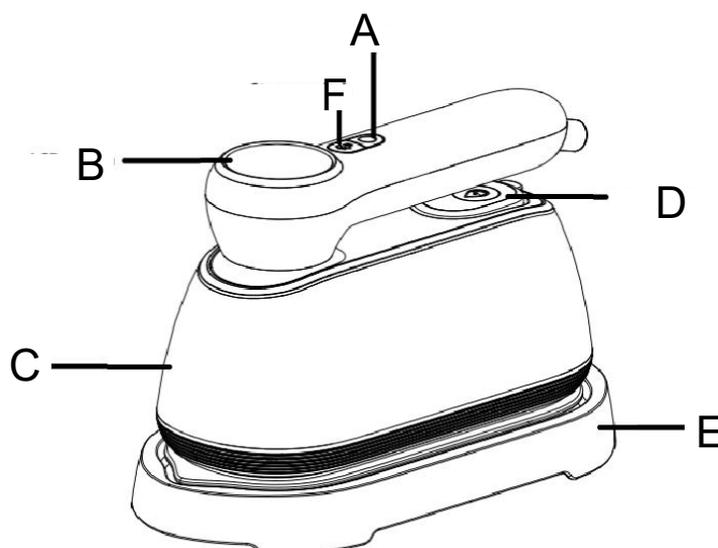

FILLING WATER

1. Disconnect the plug from the power, filling the water from the filling cap;
2. Close the cap after fill in water;

Please note:

Use tap water only, and not exceed Max water level

DRY IRONNING

1. Place the cloths on flat and tidy iron board;
2. Connect to the power to pre-heat the product, at this time the LCD screen is lighting on and start with time counting;
After finish pre-heating, the Dry ironing icon is lighting on(☰), and screen show '0' there, then we can start to use the product;
3. Due to non-adjustable of temperature, pls do not iron cloths of low temperature resistance directly. Instead, covering a wet towel onto the cloths is warmly suggested;
4. Products can used for 90° rotations, both directions are ok for ironing.

STEAM IRONNING

1. After pre-heating finished, and Dry Ironing Icon fixed on, we can use steam function. Press the Button (○) for steam, there are three different steam ratings for choosing;
2. In the meanwhile, press Steam Switch (☼) button one time, steam function is activated. When hearing continuous 'Da-Da' sound, pls filling the tank with water again;

Please note:

It is normal with several drops of water, when first time use the products. It will disappear after pre-heating finished;

Never using the products to humans or animals directly, in case of any hot hurts.

CLEANING

- Wipe the base or the body with soft cloths;
- When there are serious stains, do not clean with water directly, we suggest using a soft cloth with neutral detergent to wipe products;
- Any sediment adhering to the soleplate can be cleaned with a damp cloth or a non-abrasive liquid cleaner;
- Do not use wire or metal sanitary ware to wipe the soleplate. The plastic parts can be cleaned with a damp cloth and wiped to clean;
- Do not use wire or metal sanitary ware to wipe the bottom plate. The plastic parts can be cleaned with a damp cloth and wiped clean;
- Turn off the power switch and pour the water out the after sufficiently cooled;
- Place the iron on the base;
- Due to the high mineral content of water sources in many areas, sediment accumulation is a common problem with steam brush products. The residue of minerals will cause the steam ejection to be discontinuous, or even unable to ejection steam;
- Using below ways to remove the mineral residues:
 - Add a mixture of 50% vinegar and 50% water;
 - Connect to power, press Steam Button, in order that mixture can go into the heating chamber. Disconnect with the power and wait for 40mins;
 - Pour out all the mixtures, and filling tap water again;
 - Repeat above actions for time, until the acid smell disappears.

Pls note: if above clean ways finished and products can not work normally, products need to be repaired specially.

TROUBLESHOOTING

Below table describes the most common problems that can arise using the appliance. If the problems can not be solved with the information below, pls contact the Authorised Assistance Centre

Problems	Possible Cause	Solution
Not work	Power off PCB broken	Power on Service Centre repair
No heats & LCD screen light on	-Fuse broken - thermostat wrong -PCB wrong	Add enough water Service Centre repair
Soleplate heats & LCD screen light on	LCD screen broken	Service Centre repair
Lower steam	Under voltage	Changing using time
Tank leakage	Tank cracked	Service Centre repair
Appliance Leakage	Inside water pipe broken	Service Centre repair
Tank Deformation	Adding hot water	Service Centre repair
LCD screen lights on, button did not work	PCB broken	Service Centre repair

Guangdong Oulemei Import and Export Co., Ltd

301, No. 2 Shafengsan Road, Baiyun District, Guangzhou (location:C318 C320 C322area)

www.oulemei.top.